

SOCKET OUTLETS

Instruction Sheet

Technical Characteristics

USB Charger

With Goldmedal's USB Charger, you no longer have to go around looking for the correct charger every time you need to charge a mobile device. Simply plug in the USB cable into the fixed USB Charger and you can charge any of your modern mobile devices. This includes mobile phones, MP3 players, digital cameras, PDAs and any other device with batteries and micro-USB connection. So fix the Goldmedal USB Charger on your wall to welcome convenience and say goodbye to searching.

Technical Specifications

- Temperature range -10 degree C to + 55 degree C
- Rated input: 160- 260V ~ 50Hz
- Rated output: 5.0 VDC, 1000 mA,

Operation

- Insert the USB cable plug into the USB port and press the button on the unit.
- The USB Charger indicator LED glows Red.
- Insert the other end of the USB cable plug into the power supply jack of the device to be charged.
- On being fully charged, the USB switches off and the indicator LED glows Blue.
- Disconnect the device from the charger and remove the USB cable.

Note:

Some appliances continue to draw a little current in spite of being fully charged. In that case, the LED will remain red.

Caution


- Keep the USB Charger away from water or moisture.
- Do not let children operate the USB Charger.
- Do not operate or store the USB Charger below -10 degree C or above 55 degree C.
- Use this only for gadgets with re-rechargeable batteries.
- Do not bring inflammable, explosive or hazardous objects near the USB Charger.
- Do not operate the USB Charger if it is damaged.

Safety instruction


- Electrical equipment must be installed and fitted by a qualified electrician only.
- The electronic switches are single pole switches and disconnect only one pole when they are OFF.
- To prevent electric shock, disconnect both the poles of the main supply, before working on the appliance.
- Failure to observe any of the installation instruction may result in fire and other safety hazards.

Warranty

All electronic devices are warranted against manufacturing defects for two years from the date of purchase. In the event of defects, Goldmedal will repair or, at its discretion, replace the warranted product if delivered to a Goldmedal authorized dealer along with a duly stamped guarantee card or sales receipt that shows the date of purchase along with the serial no. of the product. This warranty excludes defects due to abnormal load, abuse, or failure to use the product in accordance with the instructions. Goldmedal shall not be liable for any other damages, whether incidental, consequential or otherwise.

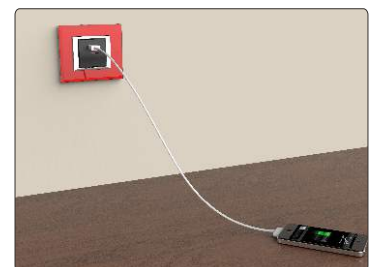


Wiring Diagram

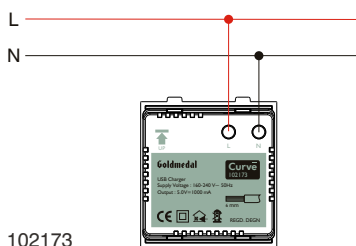

102173

Dimensions (mm)

Side view shows overall dimensions & flush depth.

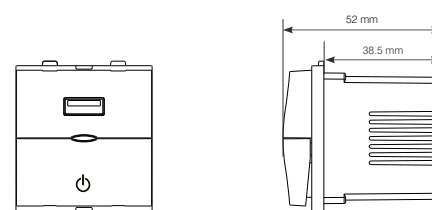

GOLDMEDAL ELECTRICALS PVT. LTD.
Bldg. No. 2, Shripal Industrial Estate, Valliv Road, Vasai East, Thane - 401208, Maharashtra, India.
For more details, email us at info@goldmedalindia.com www.goldmedalindia.com

Customer Care Toll Free No.
1800 209 0234

© Copyright 2003 by Goldmedal
Unless otherwise specified, the products illustrated in this Leaflet have been designed by Goldmedal and are covered by one or more international patents.



SOCKET OUTLETS

Instruction Sheet

Technical Characteristics

USB Charger

With the USB Charger, you no longer have to worry about finding the correct charger for your gadget. Simply connect the USB cable into the USB Charger and you can charge any of your devices like mobile phones, MP3 players, digital cameras, tablets, iPads etc. that uses rechargeable batteries and micro-USB connections.

Operation

- Insert the USB charging cable plug into the USB port .

Technical Specifications

- Temperature range -10 degree C to + 55 degree C
- Rated input: 160- 260V ~ 50Hz
- Total Rated output: 5.0 VDC, 2000 mA

Note:

- The two ports have different configurations. In case a device doesn't charge on one of the ports, switch to the other port.
- The total charge for both ports should not exceed 2 Amp. You can charge two devices that draw approximately 1 Amp. each or 1 device that needs approximately 2 Amp.

⚠ Caution

- Keep the USB Charger away from water or moisture.
- Do not let children operate the USB Charger.
- Do not operate or store the USB Charger below -10 degree C or above 55 degree C.
- Use this only for gadgets with re-rechargeable batteries.
- Do not bring inflammable, explosive or hazardous objects near the device.
- Do not operate the USB Charger if it is damaged.




⚠ Safety instruction

- Electrical equipment must be installed and fitted by a qualified electrician only.
- The electronic switches are single pole switches and disconnect only one pole when they are OFF.
- Before working on the appliance, to prevent electric shock, disconnect both the poles of the main supply.
- Failure to observe any of the installation instructions may result in fire and other safety hazards.

Warranty

All electronic devices are warranted against manufacturing defects for two years from the date of purchase. In the event of defects, Goldmedal will repair or, at its discretion, replace the warranted product if delivered to a Goldmedal authorized dealer along with a duly stamped guarantee card or sales receipt that shows the date of purchase along with the serial no. of the product. This warranty excludes defects due to abnormal load, abuse, or failure to use the product in accordance with the instructions. Goldmedal shall not be liable for any other damages, whether incidental, consequential or otherwise.

Wiring Diagram

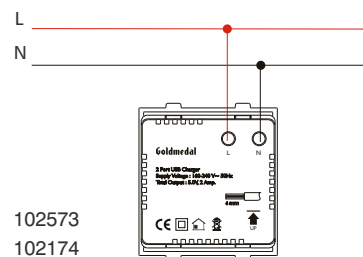

Dimensions (mm) Side view shows overall dimensions & flush depth.

